


BULLETIN - PLEASE READ!

TECHNICAL BULLETIN

A-AH209794 Corn Head Row Unit Gearbox

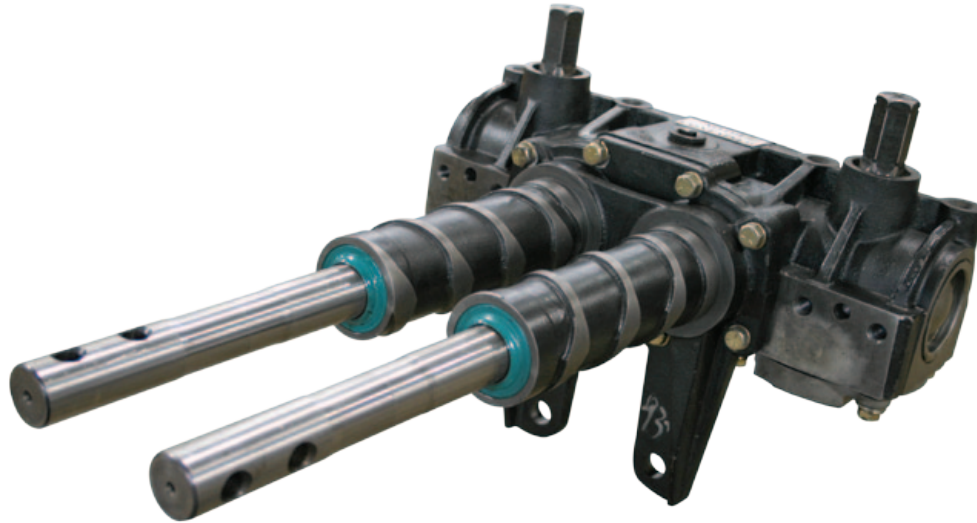

CAUTION

This gearbox is pre-lubricated, but lubrication level must be rechecked within the first twenty minutes of operation.

Use only corn head grease that meets NLGI grade 0 (zero) specifications.

This corn head grease is available from several suppliers including:

John Deere	AN102562
Case-IH	B95920
AGCO Gleaner	79014732
Royal Manufacturing	994CG
Fina	39590
Cenex	Corn Head Grease

Use the grease fitting at the rear of the gearbox to fill. Remove the inspection plug located between the upper gathering chain sprockets to check fill level. For initial fill continue filling all the way to the bottom of inspection hole. After running the gearbox the grease should be 1-1/2 inches from the top of the inspection hole.