

Operating Instructions



7" COLOR LCD QUAD MONITOR WITH TOUCH-SCREEN

Please read this manual thoroughly before operating the unit,
and keep it for future reference.

V1.4

Contents

1. Precautions	1
2. Products	3
3. Monitor Installation	5
4. Connections	6
5. Monitor Operations	7
6. Remote Operations	8
7. Menu and Touch-Screen Operations	10
8. Specifications	16
9. Troubleshooting	17

1. Precautions

● Storage and Keeping

1. Do not expose the monitor to excessive heat or cold. The storage temperature of this device is $-30\sim+80^{\circ}\text{C}$, and the operating temperature is $-20\sim+70^{\circ}\text{C}$. The humidity is Rh90%.
2. Never use this device where it is damp, such as close to wash basin, kitchen, swimming pool and the like (except for monitor designed to be weatherproof).
3. Never use this device in a dusty or smoky condition.
4. Avoid dropping or striking this device.
5. Avoid using this device in enclosed spaces, areas with excessive vibration or subject to severe impacts.
6. Never puncture, scratch or use abrasive cleaning materials on this device.
7. Do not place cables where they may be pinched or stepped on.
8. Leave at least a 2" space between the monitor and walls, cabinets or other objects to allow adequate air circulation around the unit.

● Operating Precautions

1. The device may be powered by a 12 or 24 volt automotive battery or vehicle electrical system
2. Make sure all cables are connected properly. Observe polarity. Improper cable connections may damage the monitor. Remove the power cable connections when you do not intend to use the unit.

Warning!

1. High voltage is inside. The enclosure shall not be opened unless by professionals.
2. Do not watch the video while driving unless you are backing up the vehicle.

Special Notice

Occasionally, a few highlights or dark spots may occur on the LCD screen. This is a very common phenomenon in active matrix display technology, and doesn't necessarily indicate any defects or faults. Never try to repair this device by yourself. In case of any problems, please turn off the display at once and notify our company or authorized dealer. The monitor is a complex device. Any disassembly or modification may lead to damage and void the warrantee.

● Maintenance

1. Remove all the cable connections from the monitor before cleaning the unit.
2. Use a mild household detergent and clean the unit with a slightly damp, soft cloth.
Never use strong solvents such as thinner or benzine, as they might damage the finish of the device.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This symbol is intended to alert the user not to waste electrical and electronic equipment.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your warranty and necessitate expensive repairs.









● Declaration of conformity



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.



2. Products

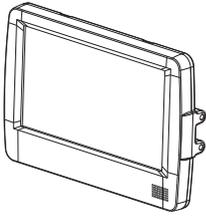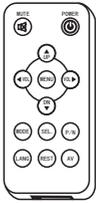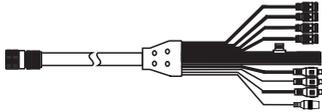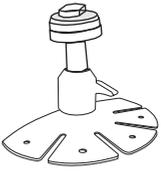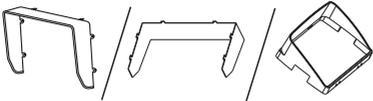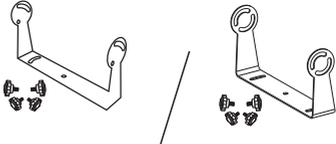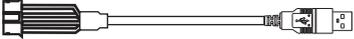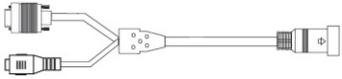
 <p>Monitor</p>	 <p>IR Remote Control</p>
 <p>AV and Power Supply Conversion Cable</p>	 <p>Center Mount Bracket</p>
 <p>Sun Shield</p>	 <p>U-Support Bracket & Angle Adjustment Screws</p>
 <p>USB sync.cable (Connects to computer for touch operation)^①</p>	 <p>RCA connector VGA cable^②</p>




Front Panel AV Input Adapter®

- ⓪ Only for the monitor with VGA input.
- ⓪ Only for the monitor with AV input.


3. Monitor installation

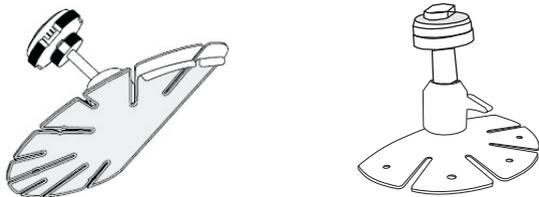

Center Mount Bracket

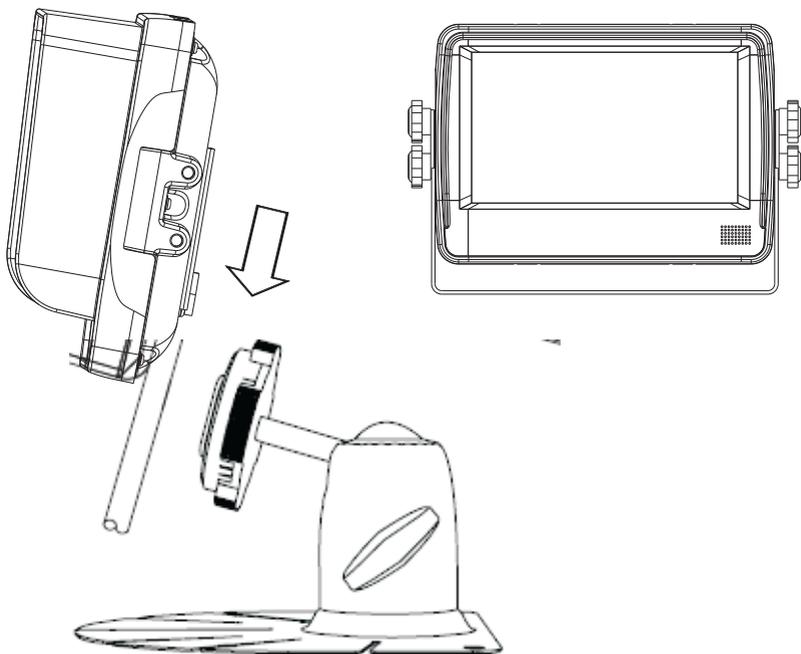

4. Connections

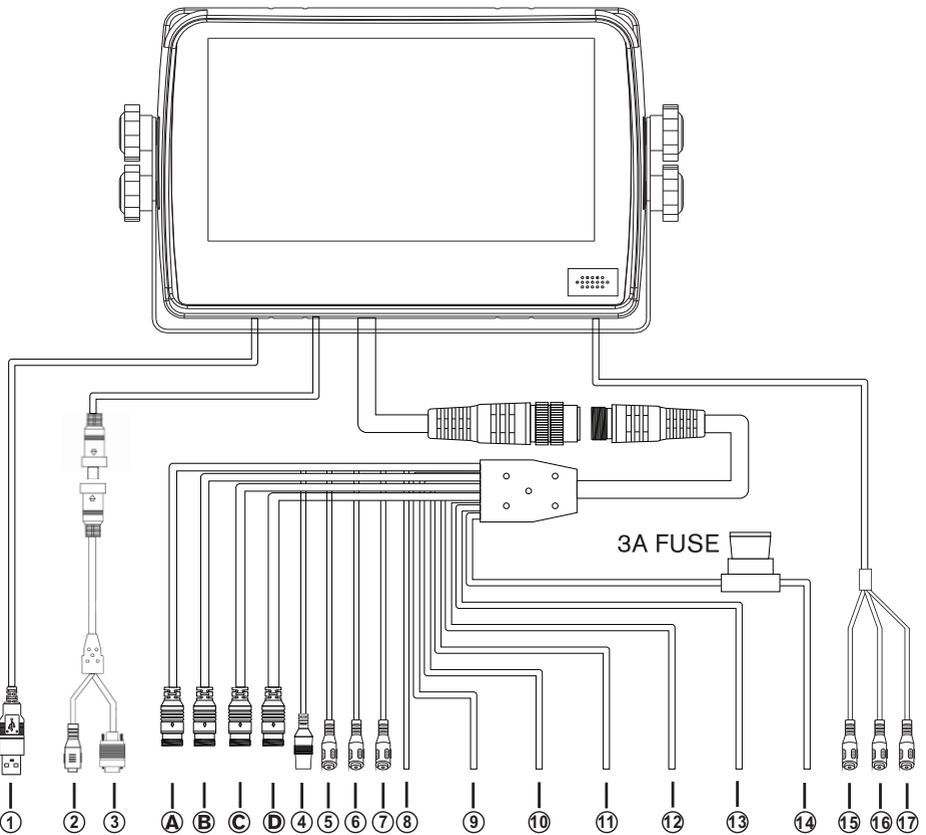

A Camera 4

B Camera 3

C Camera 2

D Camera 1

① USB sync.cable[Ⓞ]

② VGA audio input[Ⓞ]

③ VGA signal input[Ⓞ]

④ AUX audio input

⑤ Green: Rec. V. output

⑥ Yellow: Live V. output

⑦ White: Audio output

⑧ White: Trigger 1

⑨ Blue: Trigger 2

⑩ Green: Trigger 3

⑪ Brown: Trigger 4

⑫ Yellow: Split trigger

⑬ Black: Ground

⑭ Red: Power

⑮ DVD video input[Ⓞ]
(yellow RCA)


⑯ DVD audio input[Ⓞ]
(white RCA)

⑰ Null[Ⓞ]
(red RCA)

[Ⓞ] Only for the monitor with VGA input.

[Ⓞ] Only for the monitor with AV input.


5. Monitor Operations

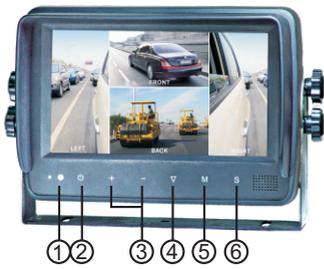

- ① Remote signal receiver window
- ② Power off/on button
- ③ To increase / decrease the volume and switch between values of each sub-menu
- ④ Menu selection and display mode (single, dual, triple, quad-view, PIP image) selection
- ⑤ Menu control button
- ⑥ Jump key selector. Fast jump to the display mode specified by SYSTEM SETUP - JUMP KEY[Ⓞ]
- ⑦ DVD A/V input (Not applicable to touch-button monitor)

[Ⓞ] For the monitor with VGA input, Fast jump to the display mode specified by SYSTEM SETUP - JUMP KEY, VGA mode and camera mode.

6. Remote Operations

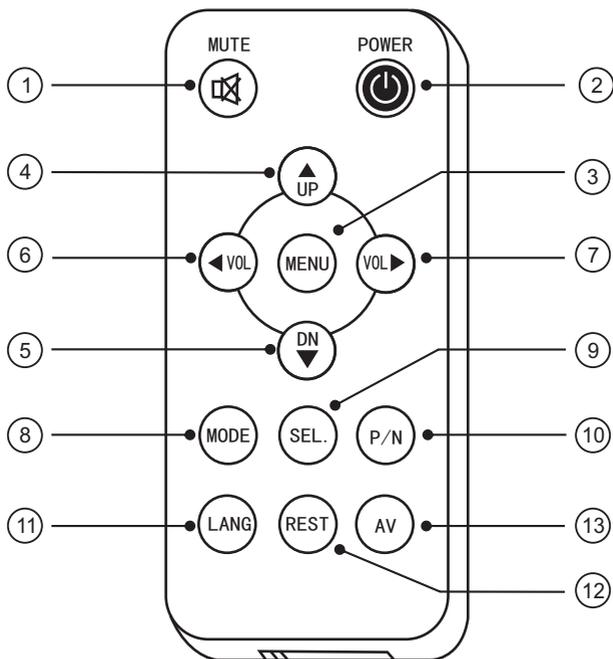

WARNING

1. Please align the remote control with the remote signal receiver window to operate.
2. Never disassemble the remote control or allow it to drop, or get wet.


- ① **MUTE**
To mute / unmute the volume
- ② **POWER**
Power off/on button
- ③ **MENU**
Menu control button
- ④ **UP**
Menu selection up
- ⑤ **DN**
Menu selection and display mode (single, dual, triple, quad-view, PIP image) selection
- ⑥ **VOL-**
To decrease the volume and switch between values of each sub-menu
- ⑦ **VOL+**
To increase the volume and switch between values of each sub-menu
- ⑧ **MODE**
Menu selection and display mode (single, dual, triple, quad-view, PIP image) selection
- ⑨ **SEL.**
Jump key selector. Fast jump to the display mode specified by SYSTEM SETUP - JUMP KEY[Ⓞ]
- ⑩ **P/N**
PAL/NTSC TV system selector
- ⑪ **LANG**
Language selection
- ⑫ **REST**
To restore factory settings
- ⑬ **AV**
To go to / leave DVD channel[Ⓞ]

Ⓞ For the monitor with VGA input, Fast jump to the display mode specified by SYSTEM SETUP - JUMP KEY, VGA mode and camera mode.

Ⓞ Only for the monitor with AV input.
For the monitor without AV input, the AV button works as JUMP KEY.


7. Menu and Touch-Screen Operations

7.1 OSD Setting

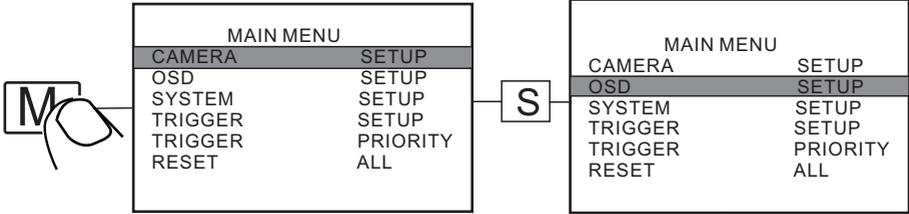


- **SCALE:**
To turn on / off electronic distance label. When set as ON, electronic distance label will be displayed when rear view camera (camera 3) is activated.
- **INPUT SCAN:**
To turn on / off auto identification of camera inputs. When INPUT SCAN is set as ON, monitor will display connected cameras and skip inputs not in connection.
- **BOUNDARY:**
To set color of the separation line between camera inputs. White, gray, black and uncolored are available.
- **LANGUAGE:**
To set OSD language. English, French, Dutch, Spanish, German and Italian are available.
- **SOFTWARE VERSION:**
To be updated at all times.

7.2 Trigger Setting

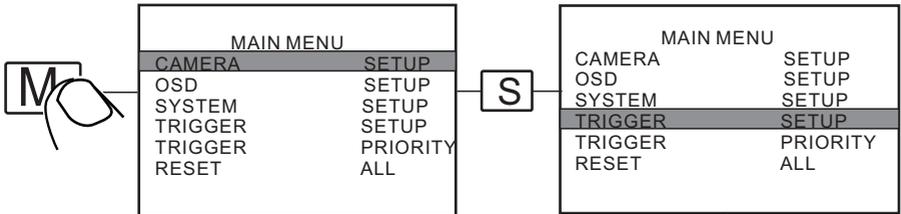

- **TURN IMAGE:**
To set the camera input(s) to be displayed when left-side camera (camera 1) / right-side camera (camera 2) is activated. When set as SINGLE, correspond camera input will be displayed when either camera is activated. When set as SPLIT, split image of left-side and rear view camera will be displayed when left-side camera is activated; split image of right-side and rear view camera will be displayed when right-side camera is activated.
- **REAR IMAGE:**
To set the camera input(s) to be displayed when rear view camera is activated. When set as BACK, the rear view camera will be displayed when activated. When set as TRIPLE, left-side, right-side and rear view camera will be displayed.
- **TRIGGER DELAY:**
To set the delaying time of video display when trigger signal goes off. Delaying time frame: 0-30 seconds.
- **SPLIT SCREEN:**
To set the camera input(s) to be displayed when "split" trigger wire is activated. LEFT / RIGHT is to set the camera input to be displayed on the left / right side of monitor screen. AUDIO is to set the audio output from any of the four cameras.


7.3 Jump Key Setting

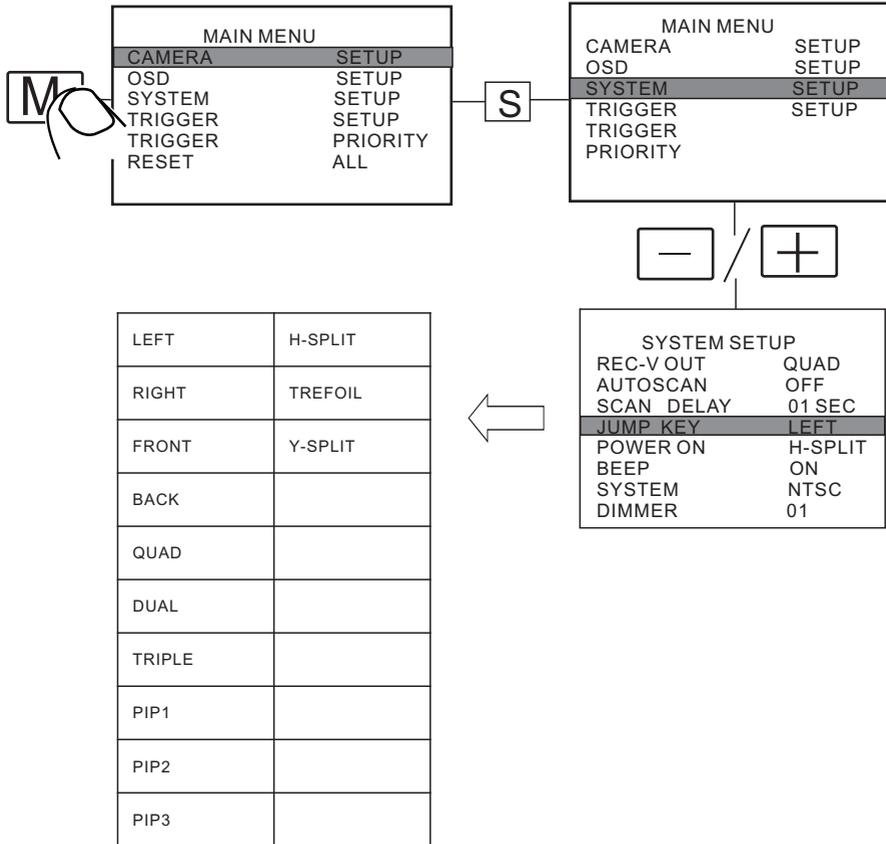


- **REC-V OUT:**
To set the camera input(s) to be recorded when connected to DVR via the green RCA wire. Left-side, right-side, front view, rear view camera and quad view image can be selected.
- **AUTOSCAN:**
To set the auto scanning function. When AUTOSCAN is set as ON, monitor will automatically switch between connected camera inputs and quad image.
- **SCAN DELAY:**
To set the switching time of AUTOSCAN. Switching time frame: 0-60 seconds.
- **JUMP KEY:**
To set the shortcut display mode from the 13 modes to the left. It can be activated by jump key selector.
- **POWER ON:**
To set the default display model from the 13 modes to the left or STANDBY mode.
- **BEEP:**
To turn on / off the warning tone. Default setting is ON and there will be a beeping sound when menu is being operated.
- **SYSTEM:**
To set TV system: PAL / NTSC.
- **DIMMER:**
To set backlighting brightness level of screen. Five levels and AUTO option are available; the higher the level, the brighter. When set as AUTO, backlighting automatically adjusts in accordance with the outer brightness.



7.4 Touch-Screen Operations

7.4.1 Switch to full screen by touching any channel in multi-viewing mode

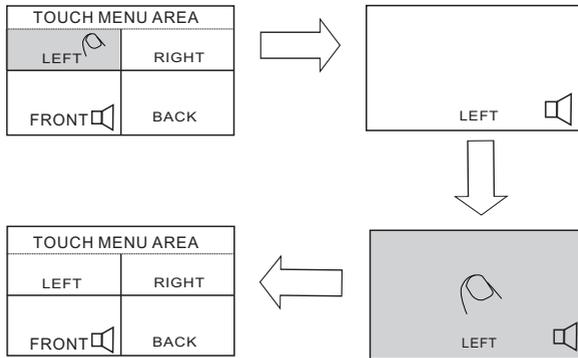

7.4.2 Buttons function of touch menu (not available in DVD/VGA/aux channel or when auto scan is on)

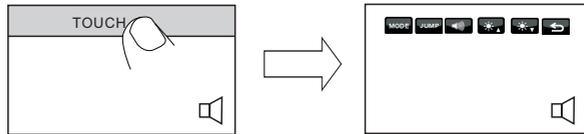


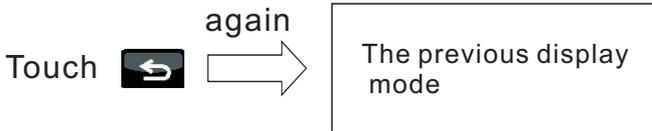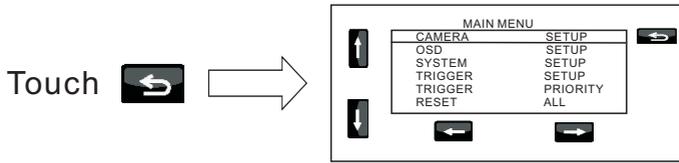


  Menu selection up/down

  Switches between values of each sub-menu


7.4.3 Exchange picture locations of any two cameras displayed in multi-viewing mode

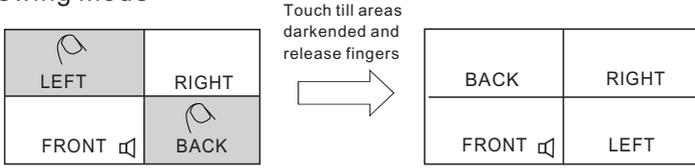


7.4.4 Exchange picture locations of two cameras in dual / triple-viewing mode (1 displayed, 1 hidden)

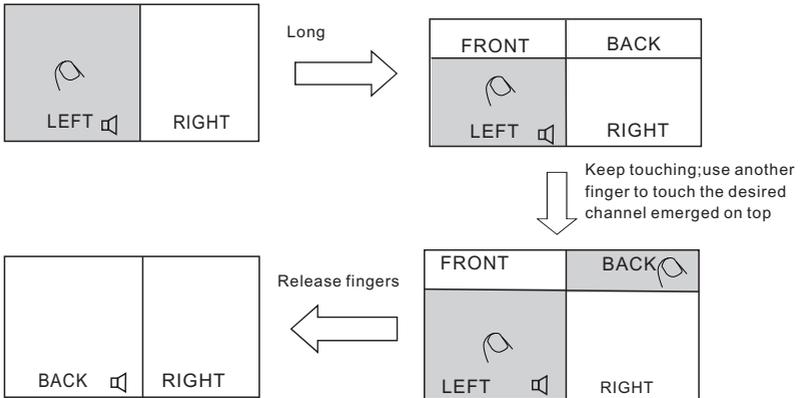


7.4.5 Switch to the next display mode

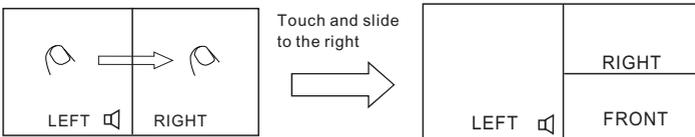


7.4.6 Switch to the previous display mode

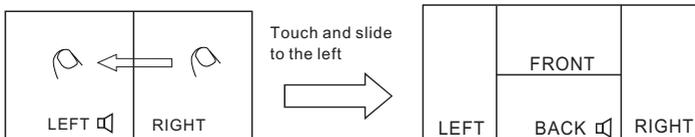

7.4.7 Decrease the volume

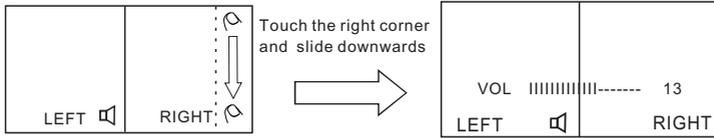

7.4.8 Increase the volume

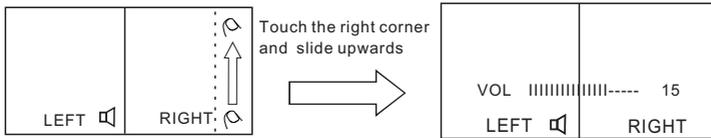

8. Specifications

Dimension	7"
TV System	NTSC/PAL
Resolution	800 (W) × 3 (RGB) × 480 (H)
Brightness	400cd/m ²
Contrast	500:1
Viewing Angle	U: 50, D: 70, L: 70, R: 70
Aspect Ratio	16:9
Pixel Pitch (mm)	0.0642 (W) x 0.1790 (H)
Operating Temperature	-20 °C ~ +70 °C
Storage Temperature	-30 °C ~ +80 °C
Power Consumption	Max. 25W
Power Output to Camera	Max. 4 × 300mA, 12V
Power Supply	10V~32V
Video Input	4 video inputs for camera - peak value: 1Vp-p, impedance: 75 ohm 1 DVD input - peak value: 1Vp-p, impedance: 75 ohm [Ⓞ]
Audio Input	4 audio inputs for camera - peak value: 1Vp-p, impedance: 4.7K ohm 1 AUX audio input - peak value: 1Vp-p, impedance: 4.7K ohm 1 DVD audio input - peak value: 1Vp-p, impedance: 4.7K ohm [Ⓞ]
Video Output	1 REC Video output - peak value: 1Vp-p, impedance: 75 ohm 1 LIVE Video output - peak value: 1Vp-p, impedance: 75 ohm
Audio Output	1 REC audio output - peak value: 1Vp-p, impedance: 4.7K ohm

Ⓞ Only for the monitor with AV input.

9. Troubleshooting

The symptoms described below do not necessarily mean a failure within the display. Please check the following items before you initiate request for repair.

Symptom	Possible Causes/Solutions
No picture, no sound	Improper connection of automobile adapter. Use of unauthorized power supply. Power switch is on OFF position.
No picture	Check whether AV cable is properly connected.
No sound	Check whether audio wire is properly connected or the sound volume is turned off or set too low.
Dark picture	Check whether brightness and contrast are adjusted correctly; Check whether the environmental temperature is too low.
No color	Adjust the color settings.
Upside down or lateral inverted picture	Use the remote control horizontal /vertical selection switch to set proper orientation
No reverse gear activated screen (i.e. Picture)	if the reverse gear is activated but no back-up image is shown on the display, please check whether the reversing trigger is loose (not connected well with the reverse light).

WARNING

Monitor systems are strictly intended to be installed as a supplement and not intended for use as substitutes for rear-view mirror devices, or for any other standard motor vehicle equipment required to be installed on vehicles by law. Our products are no substitute for proper defensive driving techniques, observance of traffic laws and motor vehicle safety regulations.

Serial No:

Stock code:

CAMERA SPECIFICATION

Image Device	1/3" CMOS PC1089	
TV System	PAL	NTSC
Effective Pixels	728x488 pixels	
Sensing Area	4.6228mmx3.6112mm	
Scanning System	2:1 Interlace	
Sync. System	Internal	
Resolution	500TV Lines	
Horizontal Sync Frequency	15.625 kHz	15.734 kHz
Vertical Sync Frequency	50 Hz	60 Hz
Video Output	1.0Vp-p, 75Ohm	
Gamma Consumption	0.45	
AGC	Auto	
S/N Ratio	Better than 48dB	
White Balance	Auto	
Electronic Shutter	Auto:1/60(NTSC)/1/50(PAL)~1/100,000 Seconds	
BLC	Auto	
Operation Frequency:	2400-2483.5MHZ	
Line of Sight Range:	120M	
Receiving Sensitivity:	-78dBm	
Video Codec:	MPEG4	
RF Band Width:	5MHZ	
Frame Rate:	PAL: 25f/s NTSC: 30f/s	
Output Power:	17dBm	
Spread SPECTRUM:	FHSS	
Delay:	400ms	
RF Bit Rate:	12Mbps	
Storage Temperature	-40°C ~ 80°C, RH95%MAX.	
Operating Temperature	-20°C ~ 50°C, RH95%MAX.	
Minimum Illumination	0 Lux	
Power Supply	DC12V	
Night vision distance	15M	
Waterproof rating	IP69K	
Image mode	Mirror/Normal image switch	
Audio	Available	
Viewing Angle	120°	